


Assembly Picture

80311 PWR/PWR Recliner

Assembly Instructions






Carefully unpack all parts before attempting to assemble.

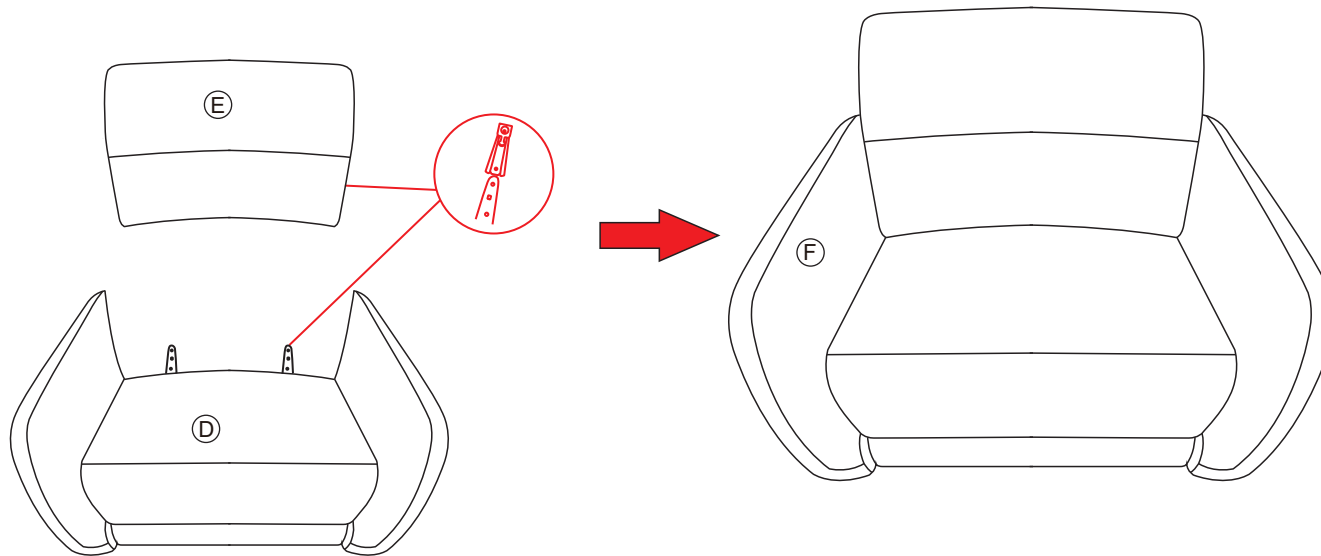

STEP 1. Install the Backrest(D) into the Seat (E) by positioning the female metal receiver brackets over the male metal posts. Ensure that female metal receiver brackets on each side of the backrest are positioned over the seat metal posts. Push down the female brackets over male posts simultaneously until each side is locked into place an audible “ click ” is heard.

STEP 2. Connect the power source.

STEP 3. Buckle up the male and female headrest connections first by tipping on the back, connect the power transformer and plug in to your electrical wall outlet with the AC cord.

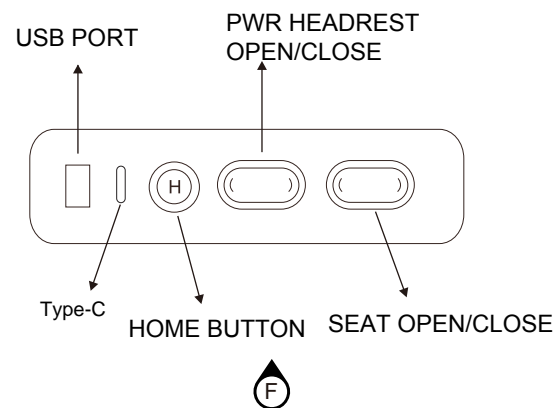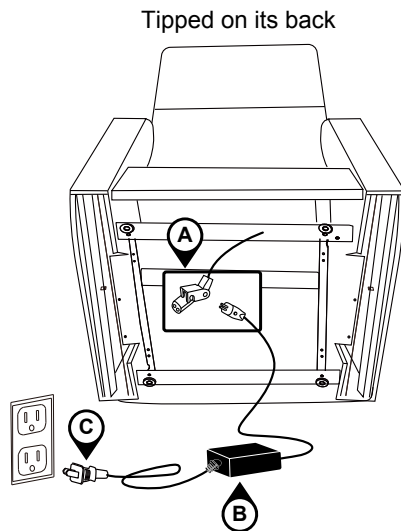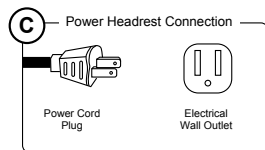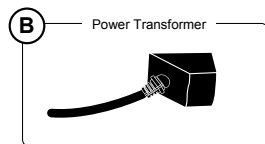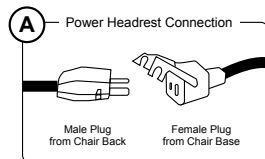

PART LIST

A-Motor wire	1
B-Power Transformer	1
C-Power Cord	1
D-PWR/PWR Recliner Backs Seats	1
E-PWR/PWR Recliner Backs Backs	1
F-Power Switch	1